




STARANDDAISY



# Installation and Operation Instructions for safety please read these instructions carefully for future reference.


# THE ASSEMBLY OF WALKER Included Item

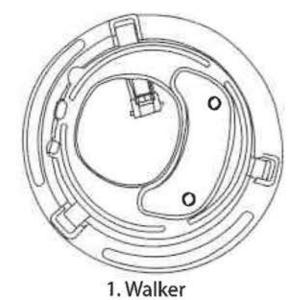




2. Seat



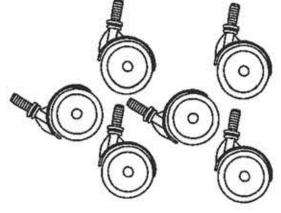

3. Push bar

6. Wheels

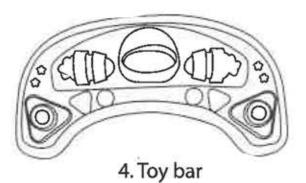




5. Toy




# **UNFOLD THE WALKER**

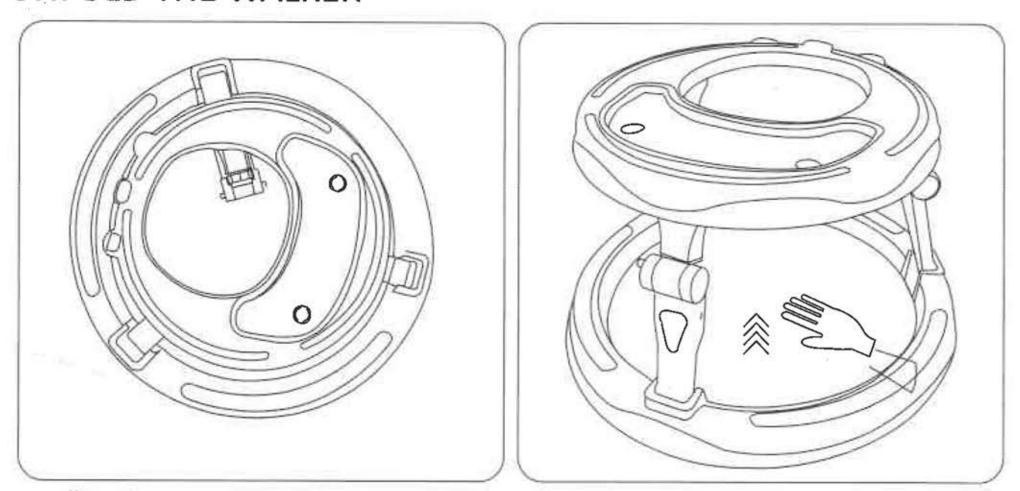


Pull up the walker head your will hear click sound at all 3 legs to ensure it is unfolded sucessfully

### SEAT INSTALLATION

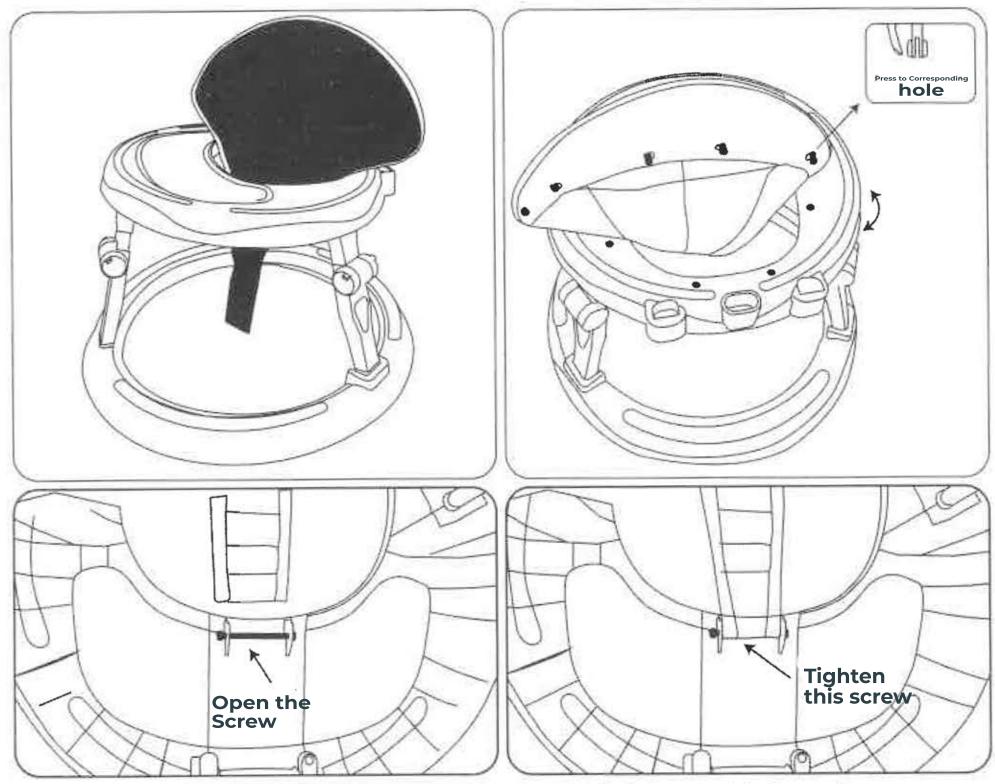


Press the plastic hooks under the seat cushion to install the seat with the walker frame.

### WHEEL INSTALLATION

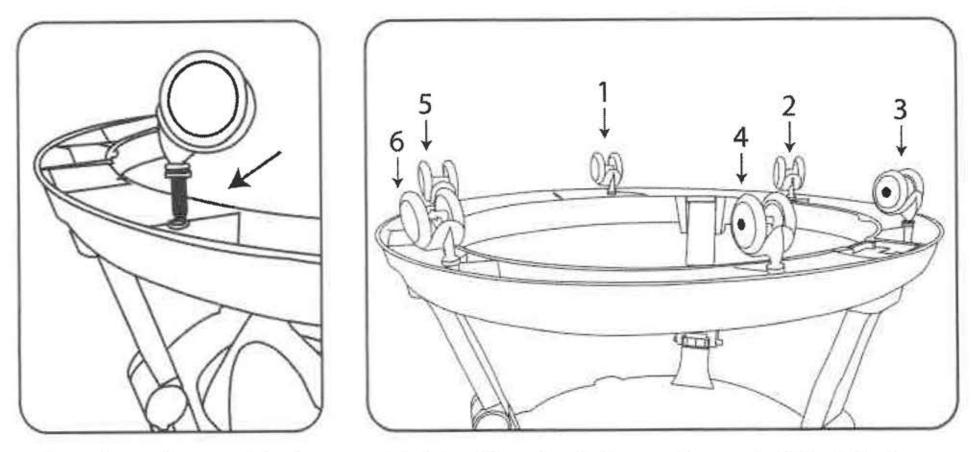


Turn the walker upside down and tighten the wheel. Ensure the seal of the wheel should touch the base fo the walker.

#### HEIGHT ADJUSTMENT

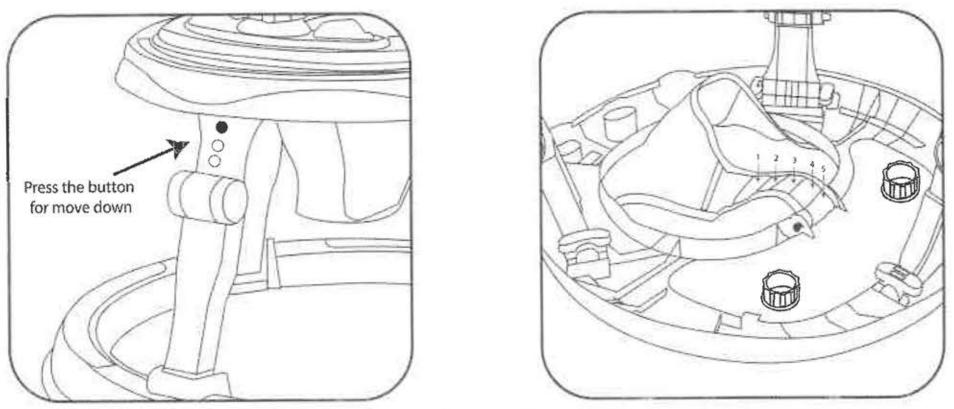

Height Adjustment: 3 position of the walker top frame as shown in figure (A) 5 position of the walker seat height adjustment as shown in figurte (B) Change the position to find the best fit for your baby


#### HOW TO FOLD

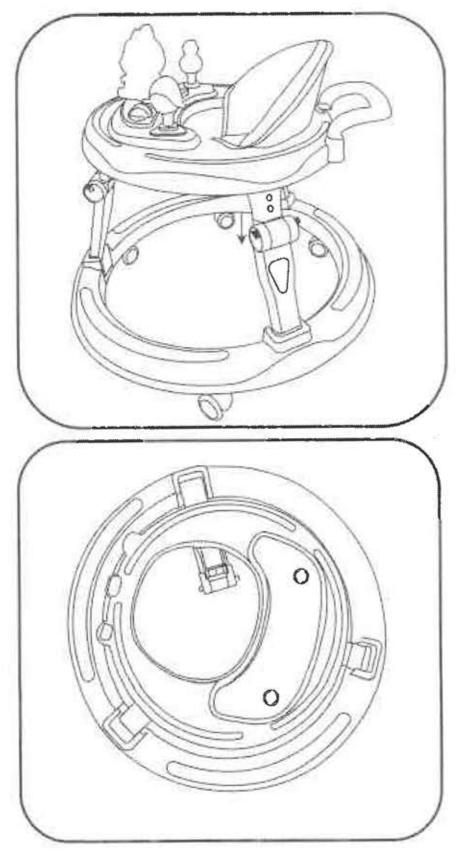





Press it down on both side of the leg using the thumbs of both hands & push inwards. Repeat this operation for all 3 legs.

#### ADD TOYS

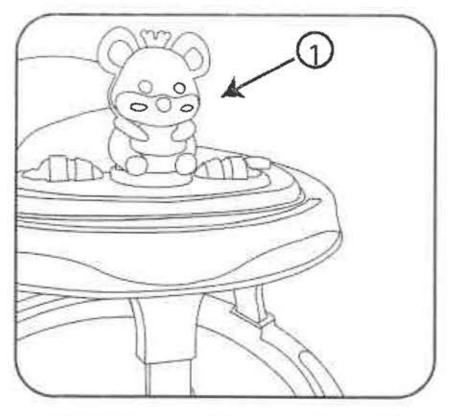


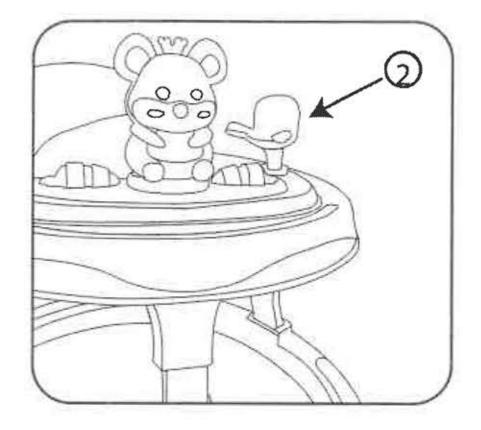

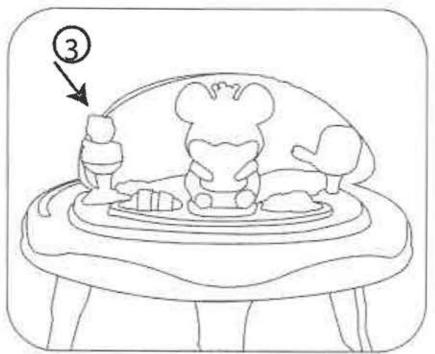

Insert all 3 toys at thier respective position press them with the hand to fully fix.

### PUSH BAR HANDEL INSTALLATION

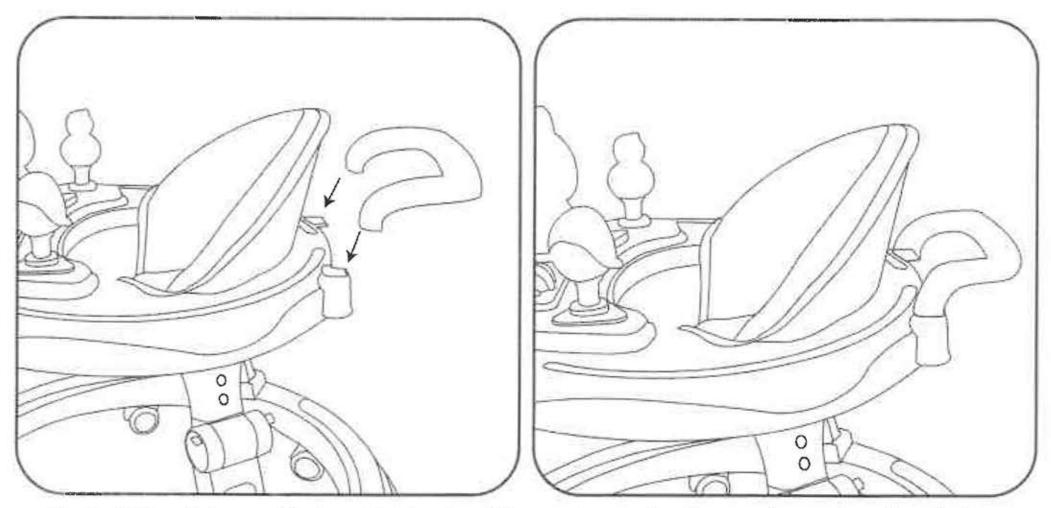

Fix it at the slot provided on the back of the seat. use the force of your hand to fix it at its position.



PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE, AND RETAIN FOR FUTURE REFERENCE. YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS.

WARNING! IMPORTANTI-Read carefully and keep for future reference. Ensure that all the locking devices are engaged before use.

WARNING! WARNING! To avoid injury ensure that the child is kept away when unfolding and folding.

this product.

WARNING! Always use the restraint system.

WARNING! Must use lowest position for child under 1 Year.

WARNING! This product is not suitable for running or skating WARNING! Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affects the stability of the vehicle.

WARNING! The Glider Scooter is designed for one child only

WARNING! Do not use the Glider Scooter if any screws, nuts, pins, etc. are missing, or if parts are damaged.

WARNING! Before assembly, make sure the product and all of its components are in good operating condition. If they are damaged, do not use the stroller.

WARNING! No additional mattress shall be added. WARNING! Use only original, manufacturer-approved spare parts.

WARNING! Accessories which are not approved by manufacturer shall not be used.

WARNING! Do not carry the Glider Scooter with the child inside. WARNING! Do not push the Glider Scooter down the stairs.

WARNING! The parking device shall be engaged when placing and removing the children. 3 years whichever comes first.

**CARE AND MAINTENANCE** 

The product requires periodic maintenance. Check systematically if wheels, brakes, supporting mechanisms, locking mechanisms, and buckles function properly.

The frame should be clean with a damp cloth. Do not use any strong detergent. thereby you may damage the plastic. Control the wear of wheels and clean them from dust or sand.

Lubricate the wheels regularly with teflon or silicone spray. Avoid contact with salt water which may cause rust.





Scan for Installation video



# www.staranddaisy.in